



Dyson Cinetic Big Ball Animal Upright Hose Replacement

This guide demonstrates how to replace the hose of the Dyson.

Written By: Karla Sunjara



INTRODUCTION



The hose is located on the backside of the Dyson.



TOOLS:

- [JIS Driver Set](#) (1)
-

Step 1 — Hose

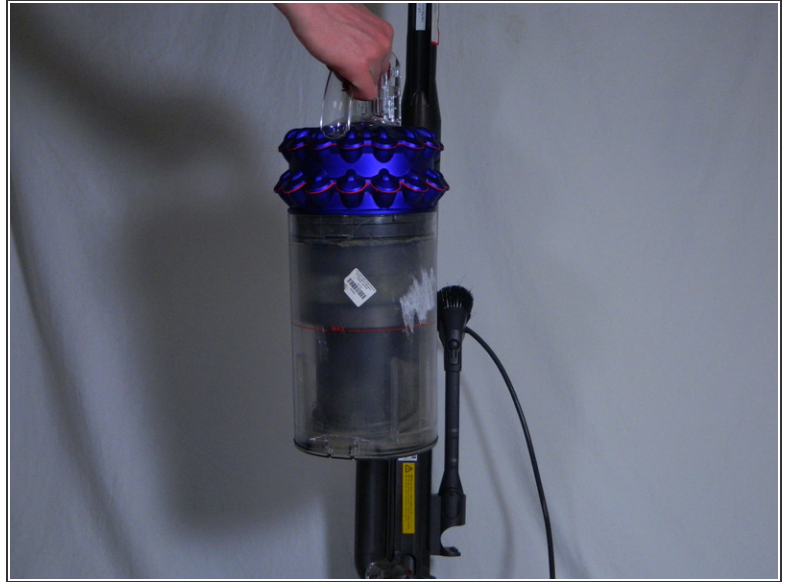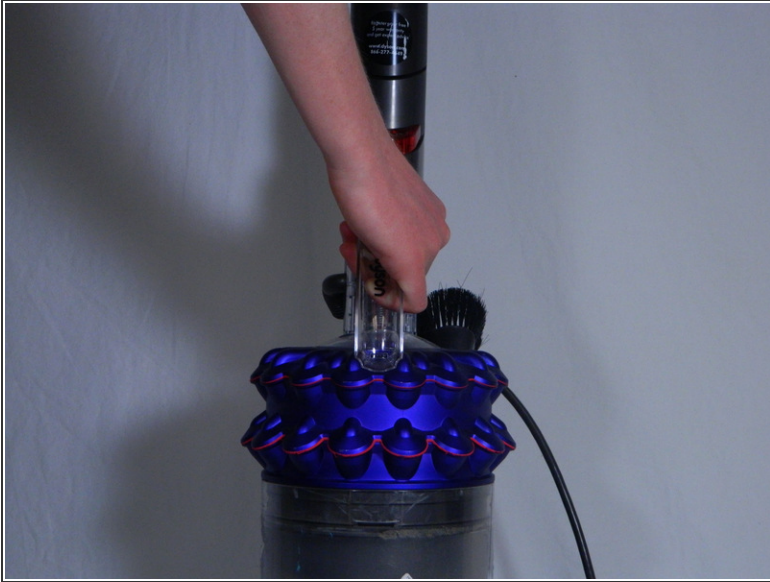

- Lift off the dust bin from the Dyson.

Step 2




- Locate the removable hose on the back of the Dyson.
- Pull up on the hose in order to remove the top half of the hose.

Step 3



- Locate the red tab on the frontside of Dyson.

Step 4

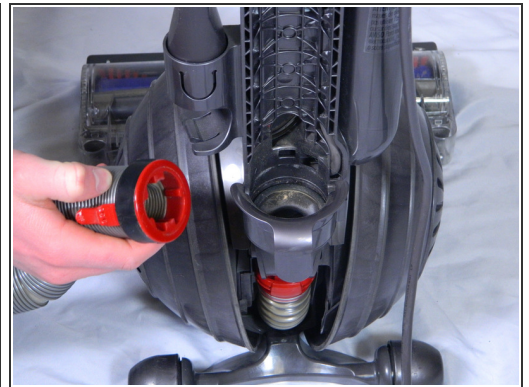

- Lift up the red tab with the screwdriver while simultaneously pulling on the back hose.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 01:15:29 PM.